

AMERICAN CHANGER & HOFFMAN MINT



"We're Changing The Industry"

1400 N.W. 65th Place Fort Lauderdale, Florida 33309

Tel: 954-917-3009 ♦ Fax: 954-917-3079

www.americanchanger.com

www.hoffmanmint.com

Toll Free: 800-741-9840

Toll Free: 800-227-5813



New Marquee Installation Guide (Flex System)


1. Turn off the machine. Unplug the machine from the outlet and disconnect the original marquee from main board.



Marquee will be connected here.

2. Remove the original marquee from the cabinet. Four screws hold it to the top of the cabinet. Be sure to pull the marquee harness completely through the hole in the top of the cabinet when removing the marquee.
3. Remove new marquee from plastic wrap. Run marquee wire through the hole in the top of the cabinet and screw marquee in place.

4. Disconnect the harness from the connector that is shown in the picture below.

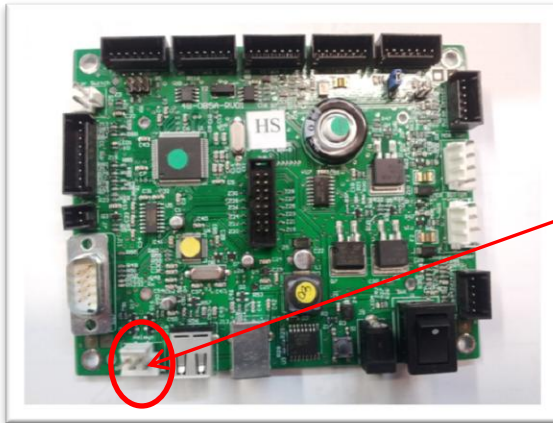


Marquee will be connected here.

5. A small harness was shipped with the marquee. Connect the harness to the board.



Marquee to Flex Board harness

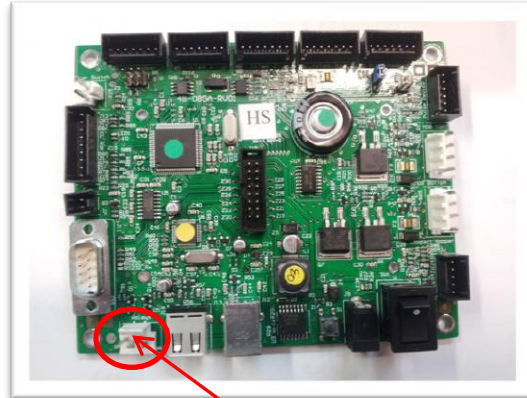

Harness will be connected here.

6. Connect the harness that was connected to the main board in the previous step to the marquee harness. Tie up excess wire in the same fashion as the original marquee. Finally plug the machine back into the outlet and turn on the board.