


Super-U with Retro Board Connections

Hopper connectors

Top connector is
Hopper 1

Bottom connector is
Hopper 2

For 1 hopper
machines use top
connector (Hopper 1).

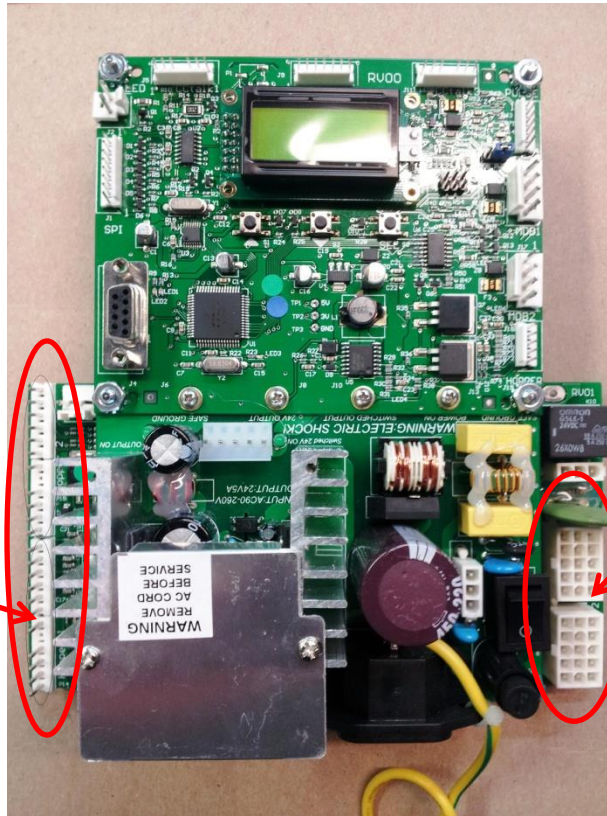


Validator Connectors

Top connector is
Validator 1

Bottom connector is
Validator 2

Installing the Board

- Remove the screws and nuts. The boards will come apart. Use pictures to see what screws and nuts to remove.
- Place spacers on the bottom studs where the old board was located inside of the cabinet.
- Place the Retro Board (board that has the hopper and validator connectors on it) on the bottom studs. This board should still have two risers attached to it. Screw on the screw on risers that were removed in the first step to all four studs.
- Place main board on to the six risers that are now in the cabinet. Two are attached to the board already installed.
- Tighten board down with supplied nuts.

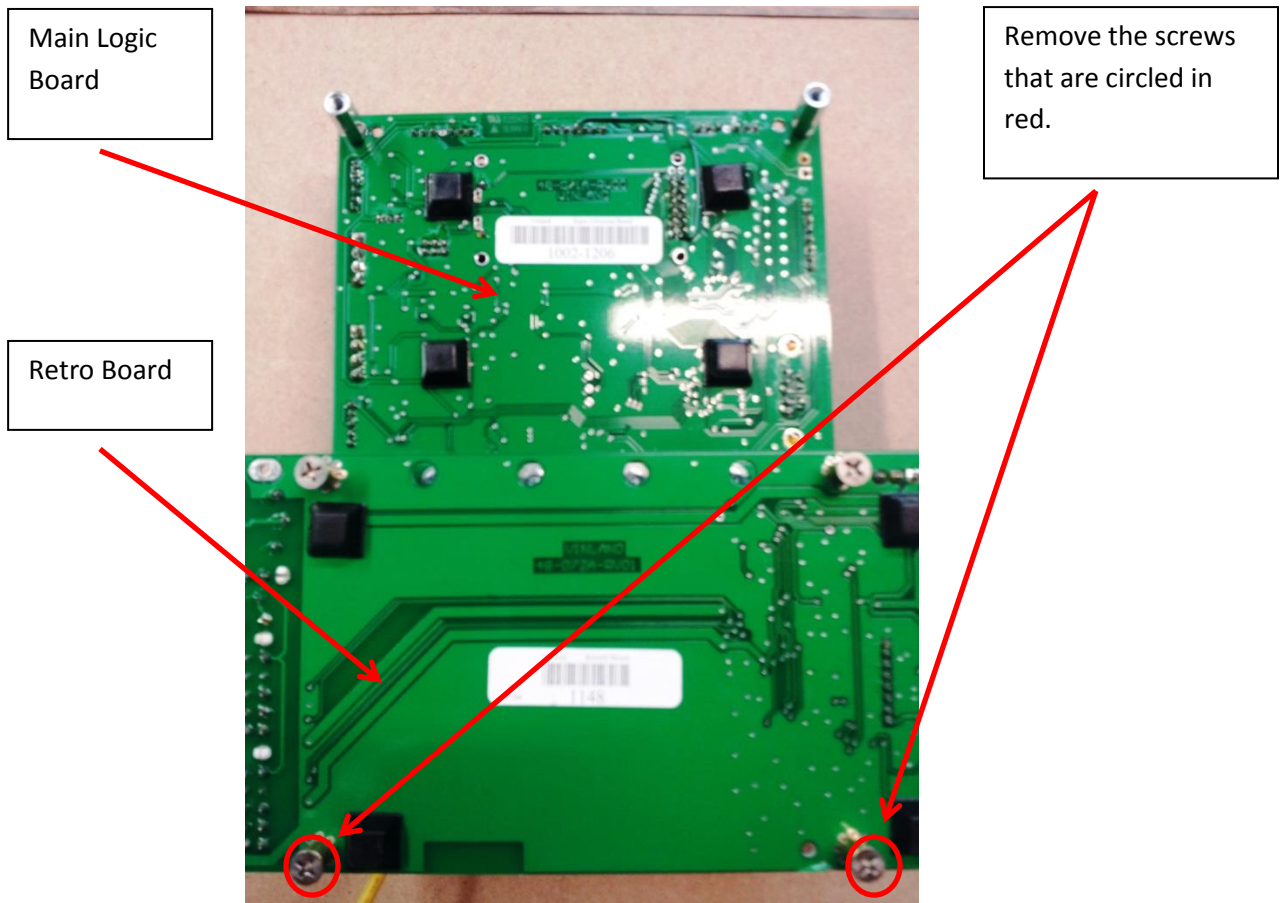

Remove the nuts that are circled in red. The two bottom nuts cannot be seen in the picture. Arrows point to their location.

